

New & Improved FASHION WAND®PRO

FEATURES:

Easily upgrade existing unsafe shades with the convenient New and Improved Fashion Wand®. It is adaptable to any existing clutch with continuous beaded cord and attractively provides a child safe control for all popular shades. It can also be used with clutch products from the Manufacturer.

RETROFIT APPLICATIONS:

- Child safe solution, with no exposed hanging chains.
- Easy to use, quick release tilt handle operation.
- Quick to install, under 5 minute changeover time using no tools.
- Aesthetically pleasing sleek wand device, encasing chain from view.
- Available in a convenient multiple length to suit popular sized medium shades.
- Independently tested and approved by WCMA/ANSI safety standards.
- No additional wall fixed chain tension devices required.
- Patented Tilt handle triggers the clutch to lift or lower the shade
- Robust Quick Release handle using UV stable polycarbonate, guaranteed to not discolor, chip or crack
- Optional cradle to hide Fashion Wand® under a fascia system, for the ultimate invisible solution.
- Reviewed by The Consumer Product Safety Commission
- Certified Best For Kids
- Limited Lifetime Warranty
- ADA - American Disabilities Act Compliant

MANUFACTURERS:

- Adaptable bead chain count for any system.
- Great for OEM products.

COMPATIBLE SYSTEMS:

Clutches:

- R-Series; R3, R8, R16, R24
- Skyline; SL5, SL10, SL15, SL20, SL30
- Galaxy; G200, G400
- RB09 Chain Control
- Cassette application with bead chain.

SPECIFICATIONS INSTALLATION OPERATION:

- Max Lift Weight - Over 40.0lbs (18kg) based on G400 capacity
- Max Shade Height -Over 10' (3m)
- Child Safety Standards -WCMA A100.1-2018 Compliant
- Chain - 50-51 BPF Plastic Loop
- Chain Length - 3' for standard 2' wand*

*Additional lengths available upon request.

INSTALLATION:

1. Remove existing control system
2. Remove existing chain
3. Replace with Fashion Wand® Connect's Chain
4. Re-Assemble System
5. Use with New OEM Products



FashionWand Operation



1. Slide Handle Up with no engagement on the tilt handle.



2. Squeeze top of handle and pull down handle to lower shade



3. Squeeze bottom of handle and pull down to raise shade