
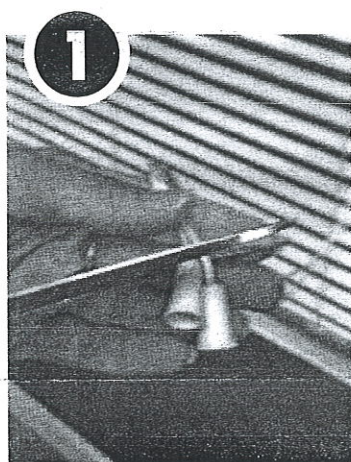
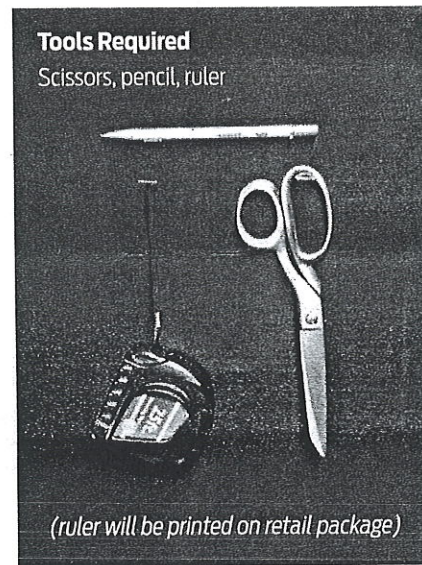



# Installation Instructions

2" Wood / 2" Faux Wood  
and 1" Mini Blinds  
(Aluminum or Vinyl)


**Prior to proceeding, confirm Fashion Wand® Head Rail Clamp fits the head rail of your blind.**

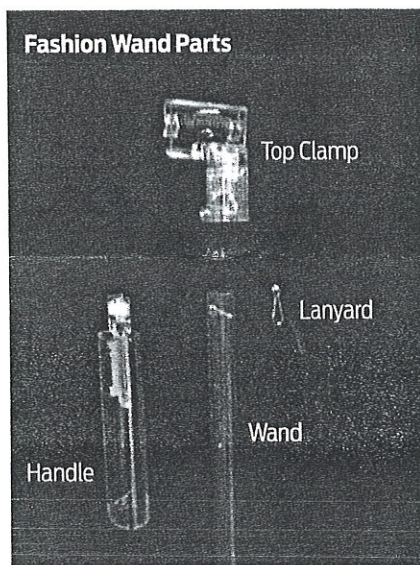


With the blind in the down position, confirm fit of the Fashion Wand Head Rail clamp, then remove tassels with scissors and discard. Cut cord evenly, this will be your reference for keeping the blind level.

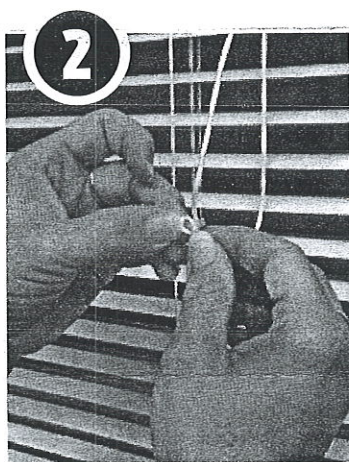


Remove plastic stops and discard.

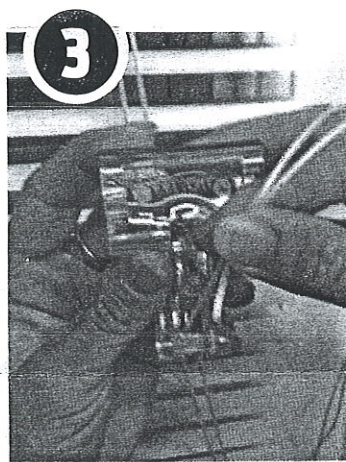


Take top clamp and turn it around. Thread the pull cords over the pulley and out the bottom of the clamp.

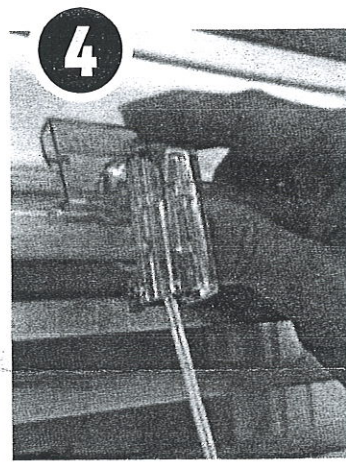


Holding the pull cords, raise the clamp to the head rail, center clamp over cord lock, snap on.

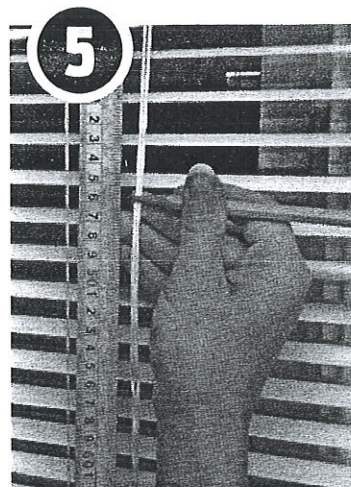

With blind in the down position, measure from top of head rail down 14 inches, mark cords with a pencil.

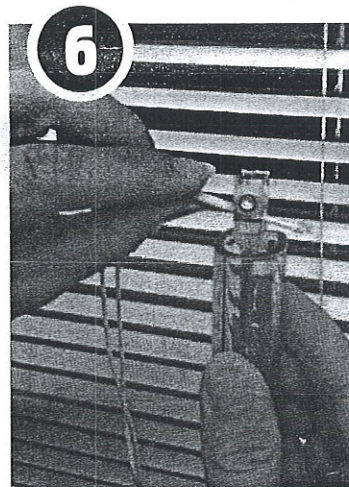


Obtain handle and position D shape of handle towards you, thread cords (left to right) under pulley at top of handle.

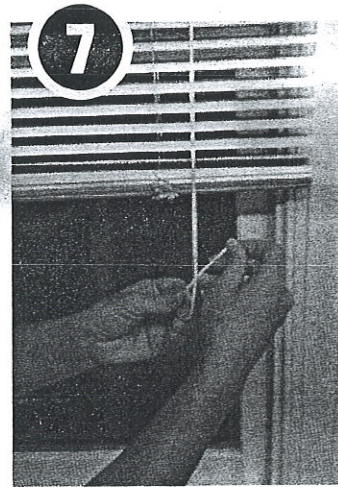


Locate the marks you made on the cord. This is where you will tie a slip knot.

Loop cords at mark.

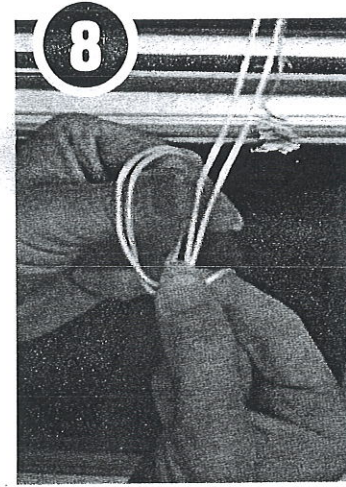

Pull cord through loop.



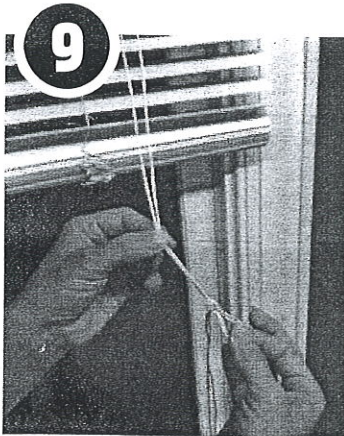


Holding the cord loop with one hand use opposite hand to lightly pull the main cord which will tighten the knot.




Obtain lanyard and hook loop onto lanyard. Slide cord around to small end of lanyard.



With the lanyard in your left hand, pull main cord until the knot is formed and tight.

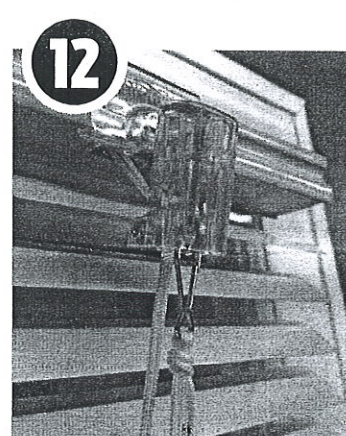


Attach lanyard onto eyelet post at head rail clamp.

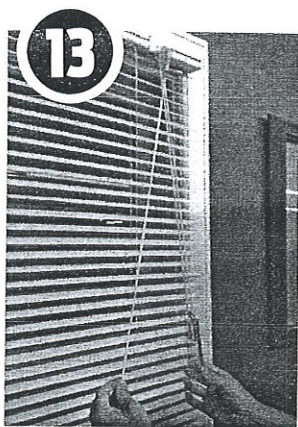

Excess cord.


***Prior to sliding the Fashion Wand into place, please remove the plastic film that is covering the Fashion Wand.***

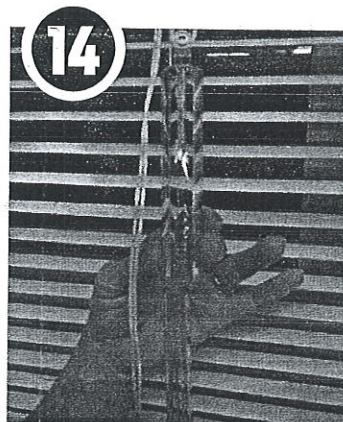

Slide wand up through the bottom of the handle.



Holding top of clamp with opposite hand insert wand into top clamp until it snaps. Let excess cord fall out back of wand.

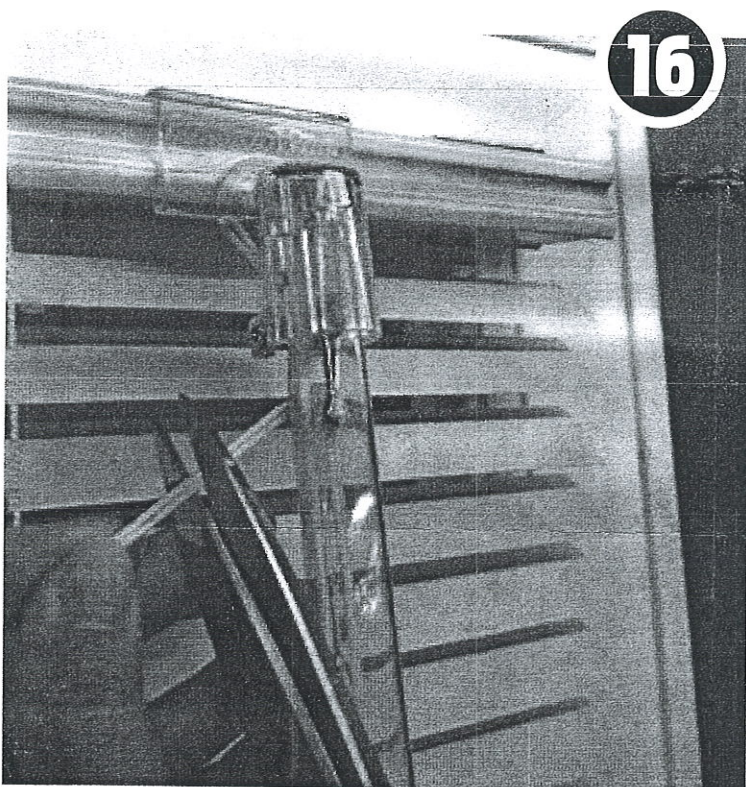

*Before trimming excess cord test the operation of the blind to ensure the blind slats are straight and the blind raises and lowers to desired level.*

Trim excess cord.

**The installation process is complete.**

**Helpful hint:** For the 2" Faux Wood and Wood blinds, we recommend that while raising the blind with the Fashion Wand® you assist the lifting process by placing your left hand under the bottom rail and lift as you pull down on the handle of the Fashion Wand®.